

Uniden®

XDECT R001

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

 
OWNER'S MANUAL

XDECT R001 Accessory Handset Owner's Manual

What's in the box?



Repeater, desk-stand, plug cover, and wallmount screws

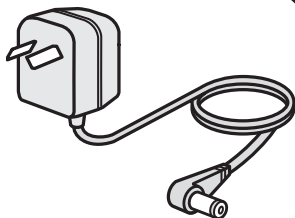

AC adapter for Repeater (AAD-041S(M))

If any items are missing or damaged, contact your place of purchase. Never use damaged products!

Need Help? Get answers at our website:
www.uniden.com.au for Australian model or www.uniden.co.nz for New Zealand model.

Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- ◆ **This unit is NOT waterproof.** DO NOT expose this unit to rain or moisture.
- ◆ Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- ◆ Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- ◆ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ◆ Use only the power cord indicated in this manual. Check with local codes for possible special disposal instructions.

 
SAVE THESE INSTRUCTIONS!

Using the Repeater

How it Works

The XDECT R001 repeater works to extend the range of the XDECT R055, XDECT R035, Elite 9035BT or Elite 9045BT base in just the same way as the repeater/charger unit. The only difference is the XDECT R001 repeater and handset-charger are separate units. Refer to your Base owner's manual for more information on how repeaters work.

- ◆ To use the repeater function, you must register the repeater to an XDECT R055, XDECT R035, Elite 9035BT or Elite 9045BT base. (Any repeaters that came packaged with the base are already registered to that base for you.)
- ◆ An XDECT R055, XDECT R035, Elite 9035BT or Elite 9045BT base can support up to six repeaters, including any that were supplied with your phone.
- ◆ Usually, you can't tell when a handset switches between the base and the repeater in the middle of a call, but sometimes, you might notice a brief pause in your conversation.
- ◆ Repeaters can be up to 3 chain-links (maximum) from the base.

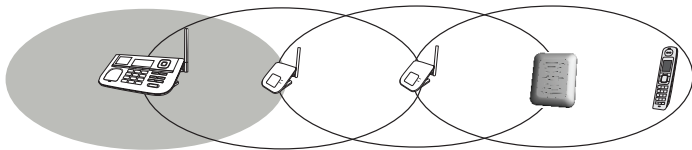

Connect the Repeater

- ◆ Remove the repeater Plug Cover from the plug section.
- ◆ Connect the AC adapter to the repeater's **DC IN 9V** jack and route the cord (This adapter might already be connected).
- ◆ Place the repeater Plug Cover over the plug section and slide into place. Plug the other end of the adapter into a standard 240V AC power outlet.

Registering the Repeater

1. If the base has an LCD display, open the menu on the base when the phone is not in use and select *Register Handset*. If the base DOES NOT have an LCD display, press and hold **FIND** on the base when the phone is not in use (about 5 seconds).
2. On the bottom of the repeater, press and hold the registration button until the **LINK** light starts to blink (about 2 seconds).
3. Release the button and wait for the **LINK** light to turn on and steady (this can take about 90 seconds).



If the **LINK** light doesn't turn on, disconnect the repeater's AC adapter.

Wait about ten seconds, then try these steps again.

Some important things to remember:

- ◆ Only register one repeater at a time. If more than one repeater is in registration mode at the same time, they can interfere with each other.
- ◆ If you want to use the repeater with a different base, just register the repeater to the new base. The repeater automatically erases the link to the old base when it registers to the new one.
- ◆ Only register repeaters to one base at a time. If more than one base is in registration mode at the same time, you can't control which base the repeater registers to.

Placing the Repeater

 
Here are a few tips for placing your repeater so that you get the clearest signal and the maximum range:

- ◆ Make sure you have good reception from the base.
- ◆ Put the repeater **at least 10m** away from the base or any other repeater. (If you put the repeater on a different floor from the base, don't forget to allow 10m vertically, also.)
- ◆ If possible, mount the repeater on the wall.

Picking the best spot

The best spot for the repeater is as far from the base as possible while still maintaining a good signal, or near the edge of the base's coverage area. To find the edge of the coverage area:

1. Stand near the base and make a call on the handset.
2. While on the call, carry a handset away from the base towards the general area where you want to put the repeater.
3. Watch the signal strength icon on the handset. Make a note where the icon drops from 4 bars to 3 bars.
4. Continue walking away from the base. Make a note where the signal strength icon drops from 3 bars to 2 or if you start to hear noise on the line (which indicates the signal is getting weaker).
5. Place the repeater anywhere inside the range where the signal strength icon showed 3 bars and the handset had a clear signal with no noise.

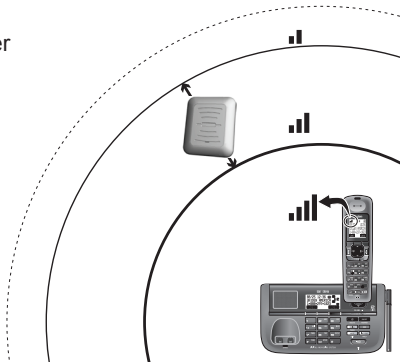

Testing the location

Connect the repeater's AC adapter and make sure the **LINK** light comes on steadily. If the light flashes, the repeater is not getting a good signal from the base. The repeater may be too far away from the base, there may be interference from electronic devices, or the signal might be blocked by thick walls or metal objects. Try moving the repeater to another location.

 
 
Wall Mounting the Repeater

You can mount the repeater directly to a wall using the horizontally aligned mounting slots at the back of the repeater unit. Before doing this consider the following:

- ◆ Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- ◆ Mount the repeater within distance of a working 240V AC power outlet.

Note! The Repeater unit is NOT waterproof. If mounted onto an outside wall place under an eave or roof overhang where it is protected from direct weather conditions, DO NOT place in direct sunlight.

1. Insert supplied two screws into the wall, 60 mm apart. (For best results, use a level to ensure the screws are even.) Remember to use appropriate anchors for the wall material.
2. Keeping the AC adapter cord out of the way, place the repeater over the screw heads and slide it down into place.

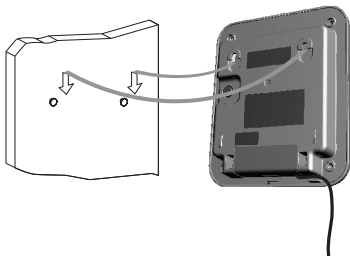

Desk Mount the Repeater

You can also desk mount the repeater by inserting the desk mount stand into the slots at the back of the unit.



Important Information

Handling Liquid Damage

Moisture and liquid can damage your cordless phone.

- ◆ If the repeater is exposed to moisture or liquid, but only the exterior plastic housing is affected, wipe off the liquid, and use as normal.
- ◆ If moisture or liquid has entered the plastic housing (i.e. liquid can be heard in the unit, follow these steps:

- | |
|---|
| 1. Disconnect the AC adapter to cut off the power. |
| 2. Let dry for at least 3 days before reconnecting. |

CAUTION! DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the unit and the microwave oven.

Specifications

AC adapter	Part number	AAD-041S(M)
	Input voltage	240V AC, 50Hz
	Output voltage	9V DC@ 350mA

- ◆ Use only the supplied AC adapter.
- ◆ Be sure to use the proper adapter for the base and any repeater or charger.
- ◆ Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- ◆ Do not place the unit in direct sunlight or subject it to high temperatures.

One-year Limited Warranty

This product comes with a one year limited warranty. Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

UNIDEN XDECT R001

IMPORTANT Evidence of the original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited ABN 58 001 865 498
Uniden New Zealand Limited

Elements of Warranty: Uniden warrants to the original retail owner for the duration of this warranty its **XDECT R001** (hereinafter referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

Warranty Duration: This warranty to the original retail owner only is only valid in the original country of purchase and shall be of no further effect 1 year after the date of original retail sale. This warranty will be deemed invalid if the Product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden. (F) Only available in the original country of sale.

Parts Covered: This warranty covers for one (1) year, the Product and included accessories.

Statement of Remedy: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the Product and return it to you without charge for parts and service. This warranty does not provide for reimbursement or payment of incidental or consequential damages. This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

Procedure for obtaining performance or warranty: in the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki,
Manukau 2013
Fax (09) 274 4253
www.uniden.co.nz

Uniden®

© 2010 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in Vietnam UJZZ01237BZ(0)