

FP1100 Corded Telephone Owner's Manual



Visit our website at:
www.uniden.com.au
 for Australian model or
www.uniden.co.nz
 for New Zealand model

Important Safety Information

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:	
RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	

Introduction

Your telephone is designed to give you flexibility in use and high quality performance. To get the most from your new telephone, we suggest that you take a few minutes right now to read through this instruction manual.

⚠ CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INFORMATION** provided with this product and save them for future reference.

 
NOTE: This phone uses Touch-Tone dialing service only. For this telephone to function properly, you must use Touch-Tone service available through your local telephone company. Hearing Aid Compatibility (HAC).

Before You Begin

Important Installation Information


- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Temporarily disconnect any equipment connected to the phone such as faxes, other phones, or modems.

Handset Layout

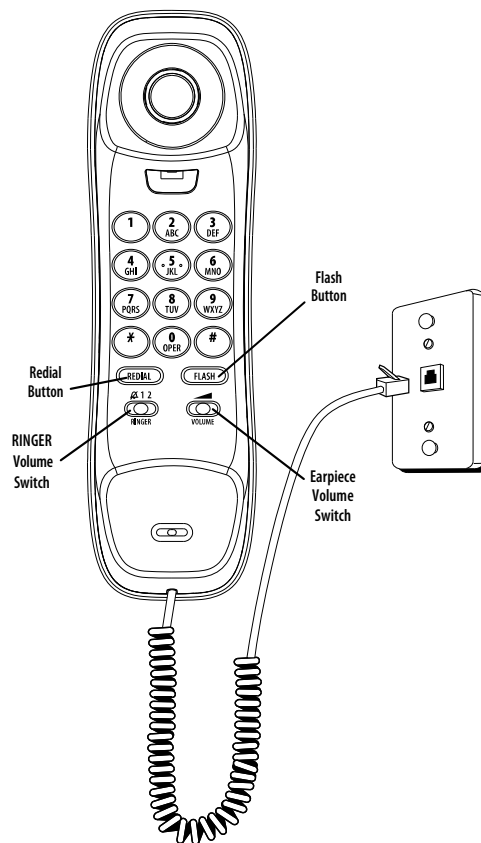

NOTE: To prevent the handset from falling out of the cradle while the phone is hanging on the wall, you must reverse the handset hook (located on the base).

 
1. Push the handset hook up and out of the slot on the base with your thumb, rotate the hook 180°, and replace it back in the slot.
2. Plug the telephone line cord into a modular wall phone jack.
3. Slip the mounting holes on the base over the wall plate posts and firmly slide the unit down into place (wall plate not included).

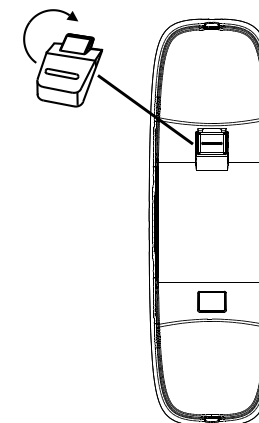

Installing the Phone

Your telephone should be placed on a level surface such as a desk or table top, or you can mount it on a wall. A desktop/wall mounting pedestal is built into the base of the phone.

 1. Slide the RINGER volume switch (on the handset) to the desired volume.
2. Set the earpiece volume switch (on the handset) to the desired listening volume.
3. Plug the telephone line cord into a modular wall phone jack.
4. Store the extra cord in the grooves in the base.

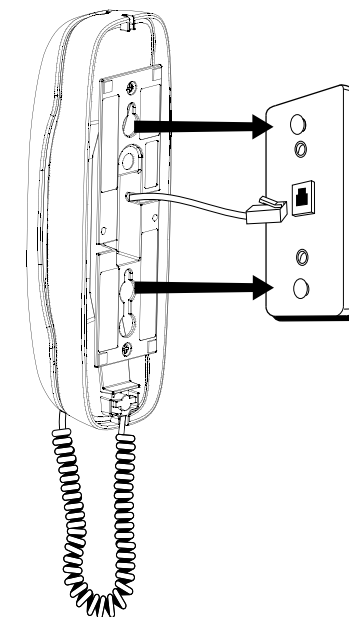

Wall Mount Installation

Your telephone may also be mounted on a wall plate (not included).

Telephone Operation

Redial

This unit redials up to 32 digits. To automatically redial the last number you called:

1. Pick up the handset and wait for a dial tone.
2. Press the redial button.

Flash - Call Waiting

If the call Waiting tone sounds while you are on a call -

Australia: Press **flash** then **2** to switch between callers.

New Zealand: Press the **flash** button to switch between callers.



NOTE

For 'Call Waiting' to operate you must subscribe to this service through your local telephone company. If you do not have this service, then pressing the flashing button during a call may disconnect the caller.

Earpiece Volume

You may control the listening level with the volume switch on the bottom of the handset. It has 3 levels: lo, mid, and high.

Ringer Volume

You may control the ringer volume level with the switch located above the touch tone pad on the handset.

- ▲ = ringer tone will be loud
- △ = ringer tone will be low
- ✕ = telephone will not ring

Troubleshooting Tips

No dial tone.

- Press and release the hook switch. Check the hook switch: Does it fully extend when the handset is lifted from the cradle?

Phone doesn't ring.

- Make sure RINGER switch (located on the handset) is set to loud or low.

- Are you using too many phones on one line? (The total REN of all phones on the same line should not be greater than the maximum REN for your calling area. REN number is located on the cabinet bottom).

Other party cannot hear you.

- Make sure phone cord is securely plugged in.
- Make sure extension phones are on the hook at the same time you're using the phone. It is normal for the volume to drop when additional extension phones are used at the same time.
- This is normal feedback due to handset volume level being set to maximum.

General Product Care

To keep your telephone working and looking good, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping and other rough treatment to the phone.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.

One-year limited warranty



NOTE

Please keep your sales docket as it provides evidence of warranty.

IMPORTANT: Evidence of original purchase is required for warranty service.

WARRANTOR: Uniden Australia Pty Limited
A.B.N. 58 001 865 498
Uniden New Zealand Limited

Warranty is only valid in the original country of purchase.

ELEMENT OF WARRANTY: Uniden warrants to the original retail owner for the duration of this warranty, its FP1100 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original retail owner only, shall terminate and be of no further effect ONE (1) year after the date of original retail sale. This warranty will be deemed invalid if the product is;

- (A) Damaged or not maintained as reasonable and necessary,
- (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
- (C) Improperly installed,
- (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,
- (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, or
- (F) Where the Serial Number label of the product has been removed or damaged beyond recognition.

Warranty only valid in the country of original retail/sale.

PARTS COVERED: This warranty covers for one (1) year, the Product and included accessories.

STATEMENT OF REMEDY: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the Product and return it to you without charge for parts or service. This warranty does not provide for reimbursement or payment of incidental or consequential damages.

This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY: In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (e.g. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED

Service Division
345 Princes Highway
Rockdale, NSW 2216
Fax (02) 9599 3278

www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED

Service Division
East Tamaki,
Manukau 2103
Fax (09) 274 4253

www.uniden.co.nz