

 
# Uniden®

**XDECT R005**

**OWNER'S MANUAL**

# XDECT R005 Accessory Handset Owner's Manual

## *What's in the box?*

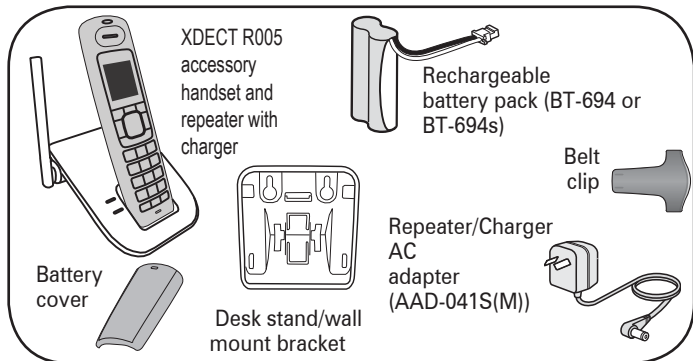

**If any items are missing or damaged, contact your place of purchase. Never use damaged products!**

**Need Help? Get answers at our website:**

**[www.uniden.com.au](http://www.uniden.com.au) for Australian model or [www.uniden.co.nz](http://www.uniden.co.nz) for New Zealand model.**

## **Important Safety Instructions!**

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- ♦ **This unit is NOT waterproof.** DO NOT expose this unit to rain or moisture.
- ♦ Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- ♦ Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- ♦ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ♦ Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- ♦ Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

---

 
 
 
**SAVE THESE INSTRUCTIONS!**

---

# Setting Up Your Handset

## Install the Battery


1. Unpack the handset, battery pack, and battery cover. If the battery cover is already on the handset, press in on the notch and slide the cover down and off.
2. Line up the battery pack connector with the jack inside the handset. (The battery connector only fits one way.)
3. Push the battery pack connector in until it clicks into place. Tug gently on the wires to make sure the battery pack is securely connected.

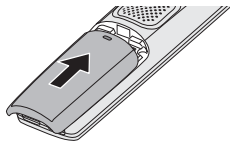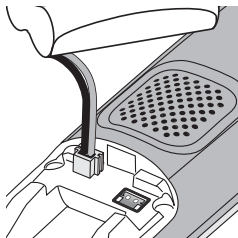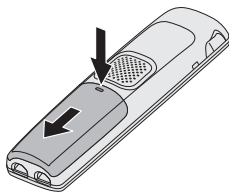

4. Place the cover over the battery compartment and slide it up into place.

## Connect the Charger

 1. Connect the AC adapter to the charger's **DC IN 9V** jack and route the cord as shown. (This adapter might already be connected.)
2. Plug the other end of the adapter into a standard 240V AC power outlet.

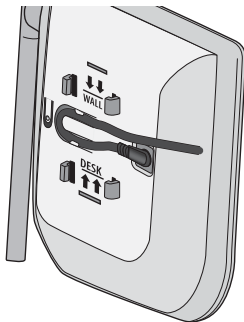

3. Place the handset in the charger with the display facing forward. The **CHARGE** light should turn on.



If...	Try...
the <b>CHARGE</b> light does not turn on	<ul style="list-style-type: none"><li>- reseating the handset.</li><li>- checking the AC adapter connection.</li></ul>

**Charge the handset completely (about 15 hours) before using it.**

## Registering the Handset

The accessory handset will not work until you register it to a base! Registering the handset is a separate process from registering the Repeater/ charger. You can use the handset normally even if the charger is not registered.

### Compatible Bases

This handset is designed for use with Uniden's XDECT R055 base. For the most up-to-date list of compatible bases for this handset, see our website.

### Register the handset

Place the handset in the base. The display should say *Handset Registering*.

**After about 30 seconds, the handset display should say *Registration Complete*.**

### Test the connection

Pick up the handset and press **TALK**. Make sure you get a dial tone. (Press **END** to hang up.)

If...	Try...
<ul style="list-style-type: none"><li>- you don't hear a dial tone</li><li>- the display says <i>Registration Failed</i></li></ul>	Making sure the handset is fully charged, then trying again.

## Attaching the Belt Clip

 
Line up the holes on each side of the handset. Insert the belt clip into the holes on each side of the handset. Press down until it clicks. To remove the belt clip, pull either side of the belt clip to release the tabs from the holes.

---

# Using the Repeater/Charger

## How it Works

The XDECT R005 repeater/charger extends the range of your base in all directions, including up and down. Each handset will automatically connect to the repeater/charger or the base, depending on which signal is stronger. (The handset operates exactly the same way whether it's connected to the base or to the repeater/charger.)

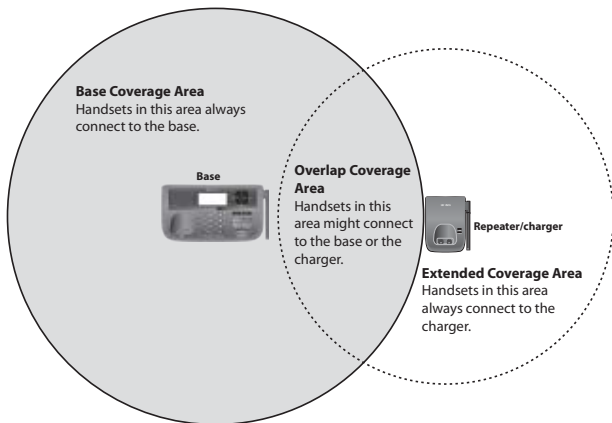

- ◆ To use the charger's repeater function, you must register the charger to an XDECT R055 base. (Any repeater/chargers that came packaged with the base are already registered to that base for you.)
- ◆ An XDECT R055 base can support up to six XDECT R005 repeater/chargers, including any that were supplied with your phone.
- ◆ Usually, you can't tell when a handset switches between the base and the repeater/charger in the middle of a call, but sometimes, you might notice a brief pause in your conversation.


## Registering the Repeater/charger

 Registering the Repeater/charger is a separate process from registering the handset. You can use the charger even if the handset is not registered.

1. On the base, open the menu and select *Register Handset*.
2. On the bottom of the repeater/charger, press and hold the registration button until the **LINK** light starts to blink (about 2 seconds).
3. Release the button and wait for the **LINK** light to turn on and steady (this can take about 90 seconds).



If the **LINK** light doesn't turn on, disconnect the charger's AC adapter. Wait about ten seconds, then try these steps again.

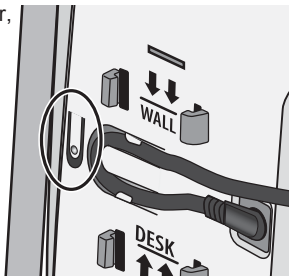

Some important things to remember:

- ◆ Only register one charger at a time. If more than one charger is in registration mode at the same time, they can interfere with each other.
- ◆ If you want to use the repeater/charger with a different base, just register the charger to the new base. The charger automatically erases the link to the old base when it registers to the new one.
- ◆ Only register chargers to one base at a time. If more than one base is in registration mode at the same time, you can't control which base the charger registers to.

## Placing the repeater/charger

 
Here are a few tips for placing your repeater/charger so that you get the clearest signal and the maximum range:

- ◆ Make sure you have good reception from the base.
- ◆ Put the charger **at least 10m** away from the base or any other charger. (If you put the charger on a different floor from the base, don't forget to allow 10m vertically, also.)
- ◆ If possible, mount the charger on the wall.

## ***Picking the best spot***

The best spot for the repeater/charger is as far from the base as possible while still maintaining a good signal, or near the edge of the base's coverage area. To find the edge of the coverage area:

1. Stand near the base and make a call on the handset.
2. While on the call, carry the handset away from the base towards the general area where you want to put the charger.
3. Watch the signal strength icon on the handset. Make a note where the icon drops from 4 bars to 3 bars.
4. Continue walking away from the base. Make a note where the signal strength icon drops from 3 bars to 2 or if you start to hear noise on the line (which indicates the signal is getting weaker).
5. Place the charger anywhere inside the range where the signal strength icon showed 3 bars and the handset had a clear signal with no noise.

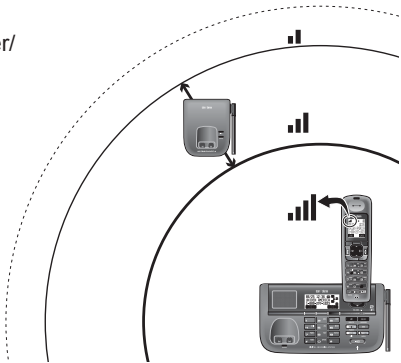

## ***Testing the location***

Connect the charger's AC adapter and make sure the **LINK** light comes on steadily. If the light flashes, the repeater/charger is not getting a good signal from the base. The charger may be too far away from the base, there may be interference from electronic devices, or the signal might be blocked by thick walls or metal objects. Try moving the charger to another location.

## Wall Mounting the Repeater/charger

 
 
If you want mount the charger on the wall, you need to adjust the desk stand:

1. Pull the locking tab up and back (see the black arrow in the illustration to the right), and slide the desk stand straight off.
2. Flip the stand over so the locking tabs that say **WALL** are facing the charger with the arrows pointing down.
3. Align the stand with the notches on the charger.
4. Slide the stand onto the notches until it clicks into place.

5. Insert two #10 screws into the wall, 30 mm apart. (For best results, use a level to ensure the screws are even.)

**Remember to use appropriate anchors for the wall material.**

6. Keeping the AC adapter cord out of the way, place the charger over the screw heads and slide it down into place.

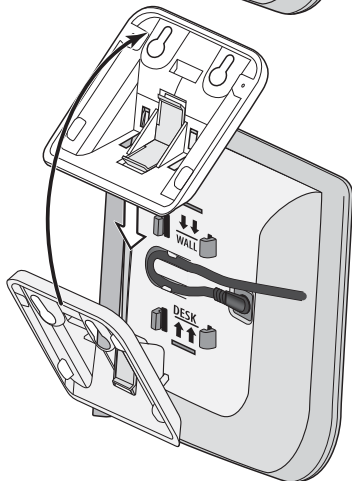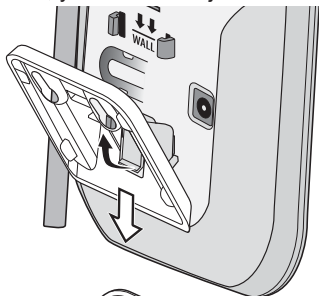

## Switching back to the desk stand

If you want to switch back to using the charger on a desktop:

1. Remove the stand.
2. Rotate the stand so that the locking tabs that say **DESK** are facing the charger with the arrows pointing up.
3. Align the stand with the notches on the charger.
4. Slide the stand onto the notches until it clicks into place.



---

# Important Information

## Handling Liquid Damage

Moisture and liquid can damage your cordless phone.

- ◆ If the handset or repeater/charger is exposed to moisture or liquid, but only the exterior plastic housing is affected, wipe off the liquid, and use as normal.
- ◆ If moisture or liquid has entered the plastic housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base), follow these steps:

Handset	Repeater/charger
<ol style="list-style-type: none"><li>1. Remove the battery cover and disconnect the battery.</li><li>2. Let dry for at least 3 days with the battery disconnected and the cover off for ventilation.</li><li>3. After the handset dries, reconnect the battery pack and replace the cover. Recharge the battery fully (15-20 hours) before using.</li></ol>	<ol style="list-style-type: none"><li>1. Disconnect the AC adapter to cut off the power.</li><li>2. Let dry for at least 3 days before reconnecting.</li></ol>

**IMPORTANT:** You must unplug the telephone line while recharging the battery pack to avoid charge interruption.

---

**CAUTION! DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.**

---

## Specifications

AC adapter	Part number	AAD-041S(M)
	Input voltage	240V AC, 50Hz
	Output voltage	9V DC@ 350mA
Battery pack	Part number	BT-694 or BT-694s
	Capacity	650mAh (BT-694) or 500mAh (BT-694s)

- ◆ Use only the supplied AC adapters.
- ◆ Be sure to use the proper adapter for the base and any chargers.
- ◆ Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- ◆ Do not place the unit in direct sunlight or subject it to high temperatures.

## Battery Information

- ◆ Fully charged, the battery should provide about 8 hours of talk time and about 7 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.
- ◆ Keep an eye on the battery status icon. When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- ◆ With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, visit the website; [www.uniden.com.au](http://www.uniden.com.au) for Australian model or [www.uniden.co.nz](http://www.uniden.co.nz) for New Zealand model.

### ***Rechargeable Nickel-Metal-Hydride Battery Warning***

---

***CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.***

---

- ◆ This equipment contains a rechargeable Nickel-Metal-Hydride battery.
- ◆ The rechargeable batteries contained in this equipment may explode if disposed of in a fire.
- ◆ Do not short-circuit the battery.
- ◆ Do not charge the rechargeable battery pack used in this equipment with in any charger other than the one designed to charge this battery pack as specified in the owner's manual. Using another charger may damage the battery pack or cause the battery pack to explode.

**Rechargeable Batteries Must Be Recycled or Disposed of Properly.**

**Uniden works to reduce lead content in PVC coated cords in our products & accessories.**

---

# One-year Limited Warranty

## UNIDEN XDECT R005

**IMPORTANT Evidence of the original purchase is required for warranty service.**

**Warrantor:** Uniden Australia Pty Limited ABN 58 001 865 498  
Uniden New Zealand Limited

**Elements of Warranty:** Uniden warrants to the original retail owner for the duration of this warranty its **XDECT R005** (hereinafter referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**Warranty Duration:** This warranty to the original retail owner only is only valid in the original country of purchase and shall be of no further effect 1 year after the date of original retail sale. This warranty will be deemed invalid if the Product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden. (F) Only available in the original country of sale.

**Parts Covered:** This warranty covers for one (1) year, the Product and included accessories.

**Statement of Remedy:** In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the Product and return it to you without charge for parts and service. This warranty does not provide for reimbursement or payment of incidental or consequential damages. This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

**Procedure for obtaining performance or warranty:** in the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

### UNIDEN AUSTRALIA PTY LTD

Service Division  
345 Princes Highway,  
Rockdale, NSW 2216  
Fax (02) 9599 3278  
[www.uniden.com.au](http://www.uniden.com.au)

### UNIDEN NEW ZEALAND LTD

Service Division  
150 Harris Road, East Tamaki,  
Manukau 2013  
Fax (09) 274 4253  
[www.uniden.co.nz](http://www.uniden.co.nz)

**Uniden®**

© 2009 Uniden Australia Pty Ltd/Uniden New Zealand Limited  
Printed in Vietnam UZZ01208BZ(0)