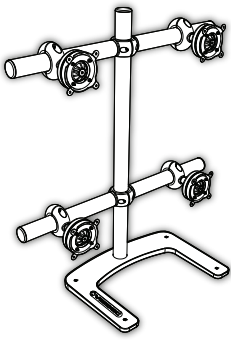# VISIDEC

FREESTANDING QUAD
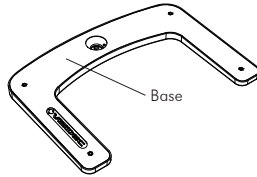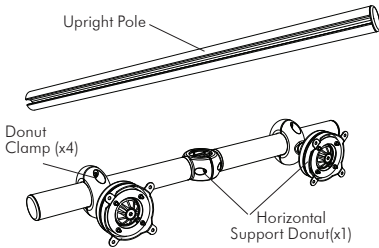### Installation Instructions

Important Notes

- Each Donut Clamp Assembly supports a maximum weight of 11.5kg (25lbs)
- This product suits VESA compliant displays with 75mm x 75mm (3" x 3") and 100mm x 100mm (4" x 4") mounting hole patterns.
- The manufacturer does not accept responsibility for incorrect installation

Component Checklist

Check you have received all parts against this component checklist prior to installation

Upright Pole

Base

Donut Clamp (x4)

Horizontal Support Donut(x1)

Bits Box

M8x50mm Screw (x1)

Cable Ball (x8)

Cable Clip (x4)

Extension Clip (x16)

2.5mm Allen Key (x1)

5mm Allen Key (x1)

Mounting Screws
- M4x10mm (x16)
- M4x12mm (x16)
- M4x16mm (x16)

TOOLS REQUIRED:
- Phillips Head Screw Driver

(A) Attach Upright Pole to Base

Attach the Upright Pole to the Base as shown below. Ensure the Cable Slot faces towards the rear.

Back

Upright Pole

Cable Slot

User

M8x50mm Screw

5mm Allen Key

TIGHTEN FIRMLY
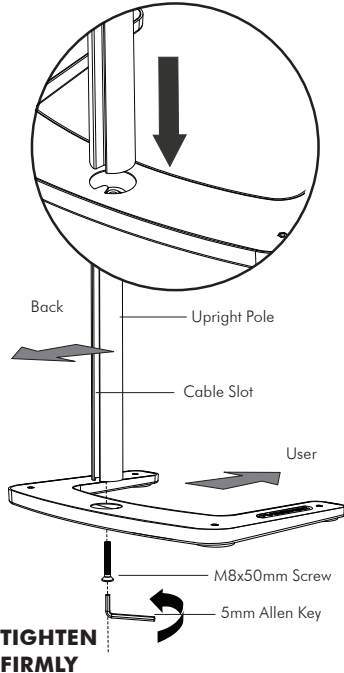
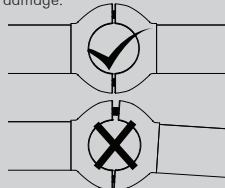### (B) Install Horizontal Support and Donut Clamp

Follow steps below to attach the Horizontal Support and Donut Clamp assembly onto the Upright Pole. Ensure the Cable Slots in all the Poles are facing to the rear.

B.1.
Loosen the Hex screws in the Horizontal Support Donut using the supplied 5mm Allen Key
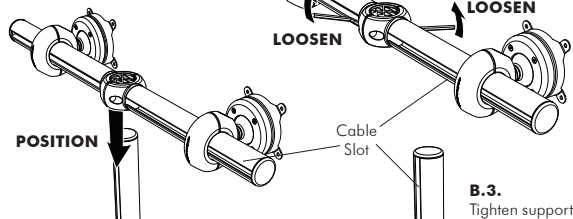
B.2.
Slide the Horizontal Support to desired position

LOOSEN

LOOSEN

POSITION

Cable Slot

B.3.
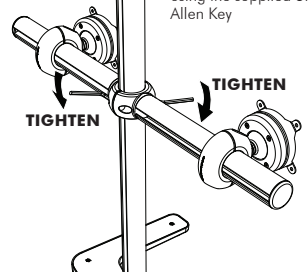Tighten supports firmly using the supplied 5mm Allen Key

IMPORTANT:
When tightening the Donut Clamp, each of the Donut bolts must be tightened evenly, as failure to do so will damage the Donut Clamp. Do not over-tighten as this may also result in damage.
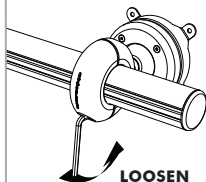
TIGHTEN

TIGHTEN

TIGHTEN

Repeat steps B.1, B.2 and B.3 for the 2nd set of Horizontal Support and Donut Clamp

C. Adjust Donut Clamps

Follow steps below to adjust the position of Donut Clamps. Ensure the Cable Slots in all the Poles are facing to the rear.
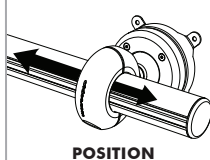
C.1.
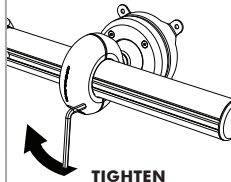Loosen Donut Bolts evenly using the supplied 5mm Allen Key

LOOSEN

C.2.
Slide the Donut Clamp to desired position
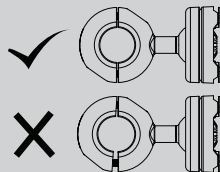
POSITION

C.3.
Tighten Donut Bolts firmly using the supplied 5mm Allen Key
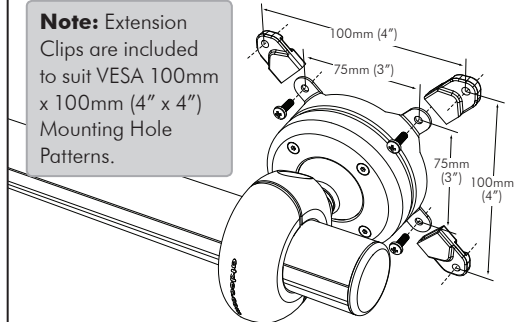
TIGHTEN

IMPORTANT:

When tightening the Donut Clamp, each of the Donut bolts must be tightened evenly, as failure to do so will damage the Donut Clamp. Do not over tighten as this may also result in damage.

✓

✗

D. Mount Displays

Choose the correct Mounting Screws supplied in the bits box and attach the display as shown.

Note: Extension Clips are included to suit VESA 100mm x 100mm (4" x 4") Mounting Hole Patterns.

100mm (4")
75mm (3")
75mm (3")
100mm (4")

E. Adjust Ball Joint Mechanism

Adjust the Ball Joint Mechanism to suit the weight of your display. Tighten or loosen screws evenly with the supplied 2.5mm Allen Key, 1/4 turn at a time.

LOOSEN

2.5mm Allen Key

TIGHTEN
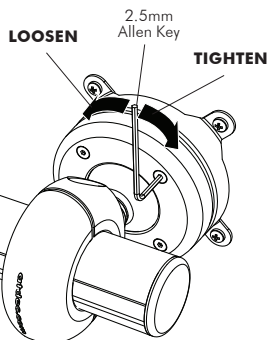
F. Cable Management

Insert display cables into the slots in each pole, using Cable Balls to hold them in place.

Note: When the slot in each pole cannot be used, use the supplied Cable Clip's to secure the display cables.

Cable Balls

Cable Clips

Note: Ensure enough slack is left in cables to allow for movement.

atdec