

Uniden®

DECT 3035

For more exciting new products please visit our website:

Australia: www.uniden.com.au

New Zealand: www.uniden.co.nz

OWNER'S MANUAL

DECT 3035 Series Owner's Manual

What's in the box?



DECT 3035 base with answering system and cordless handset

Battery cover



Not pictured:

- Rechargeable battery (BT-694 or BT-694s)
- AC adapter (AAD-041S(M))
- Telephone cord
- Wall mount bracket

You will also find:



Accessory handset and charger

Not pictured:

- Rechargeable battery (BT-694 or BT-694s)
- Battery cover
- AC adapter AAD-600S(M)

If you purchased model number:	You should have:
DECT 3035	None
DECT 3035+1	1 of each
DECT 3035+2	2 of each
DECT 3035+3	3 of each
DECT 3035+4	4 of each
DECT 3035+5	5 of each

- ◆ If any items are missing or damaged, contact your place of purchase immediately. Never use damaged products!
- ◆ Need Help? Get answers at our website:
www.uniden.com.au for Australian model
www.uniden.co.nz for New Zealand model.

What's in the manual?

Getting Started	4	Personalizing the Greeting	16
Installing Your Phone	4	Accessing the Answering System	17
Getting to Know Your Phone	5	Getting Your Messages	17
Using the Handset Menu	8	Using the System While You're Away from Home	18
Using Your Phone	10	Important Information	19
Using the Phonebook	12	Solving Problems	19
Using Special Features	13	Resetting Handsets	21
Silent Mode (DND - Do Not Disturb)	13	Registering Handsets	21
Multihandset Features	13	Adapter and Battery Information	22
Chain Dialing	15	Wall Mounting the Base	23
Voice Message Notification	15	One-Year Limited Warranty	27
Using the Answering System	15		
Answering System Options (Ans. Setup)	15		

Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- ◆ **This unit is NOT waterproof.** DO NOT expose it to rain or moisture.
- ◆ Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- ◆ Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- ◆ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ◆ Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- ◆ Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

SAVE THESE INSTRUCTIONS!



CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.

For more details, see the *Important Information* section.

GETTING STARTED

Installing Your Phone

Charge the Battery

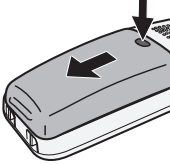1. Unpack all handsets, battery packs, and battery covers.
If you need to remove a cover, press in on the notch and slide the cover down and off.
 2. Line up the battery connector with the jack inside the handset; the connector only fits one way.
 3. Push the connector in until it clicks into place; tug gently on the wires to make sure the battery is securely connected.
 4. Replace the battery cover and slide it into place.
 5. Use an AC adapter to connect the power jack on the base to a regular indoor (240V AC) power outlet. Connect any chargers the same way.
 6. Place a handset in the base with the display facing forward. If the display doesn't light up, reseal the handset or connect the base to a different outlet. For 2 or more handsets, place each handset in a charger.
- A diagram of a battery pack. A black arrow points down to a notch on the top surface. Another black arrow points left, indicating the direction to slide the cover off.
-  **Charge all handsets completely (about 15 hours) before using.**

Connect the Telephone Cord


Use the telephone cord to connect the TEL LINE jack on the base to a standard telephone wall jack.

Test the Connection

1. Pick up the handset and press **TALK**. The handset sounds a dial tone, and the display shows *Talk*.
–If you don't hear a dial tone or the display says *Check Tel Line*, check the connection between the base and the phone jack.
2. Make a quick test call. (Press **END** to hang up.)
–If there's a lot of noise, check for interference (see p. 20).
3. Test all handsets the same way. If you can't get a dial tone, move the handset closer to the base.

Getting to Know Your Phone

Parts of the Handset

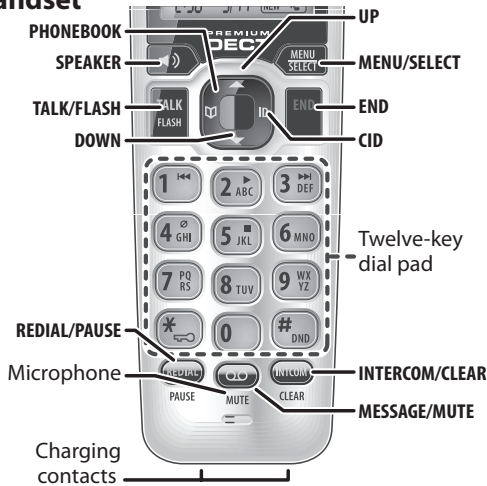


Key (icon)	What it does
PHONEBOOK (📖)	<ul style="list-style-type: none"> • In standby or during a call: open the phonebook. • In the menu: go back to the previous screen. • When entering text: move the cursor to the left.
SPEAKER (🔊)	<ul style="list-style-type: none"> • Switch a normal call to the speakerphone (and back).
TALK/FLASH	<ul style="list-style-type: none"> • In standby: start a telephone call (get a dial tone). • During a call: switch to a waiting call.
DOWN (▼)	<ul style="list-style-type: none"> • In standby: decrease the ringer volume. • During a call: decrease the audio volume. • In any menu or list: move the cursor down one line.
REDIAL/PAUSE	<ul style="list-style-type: none"> • In standby: open the redial list. • When entering a phone number: insert a 2-second pause.
UP (▲)	<ul style="list-style-type: none"> • In standby: increase the ringer volume. • During a call: increase the audio volume. • In any menu or list: move the cursor up one line.
MENU/SELECT	<ul style="list-style-type: none"> • In standby: open the menu. • In the menu or any list: select the highlighted item.
END	<ul style="list-style-type: none"> • During a call: hang up. • In the menu or any list: exit and go to standby.
CID	<ul style="list-style-type: none"> • In standby or during a call: open the Caller ID list. • When entering text: move the cursor to the right.

Key (icon)	What it does
INTERCOM/ CLEAR	<ul style="list-style-type: none"> • In standby: start an intercom call. • During a call: put the call on hold and start a call transfer. • When entering text or numbers: erase the character at the cursor (press & hold to erase all characters).
MESSAGE/MUTE (∞)	<ul style="list-style-type: none"> • In standby: access your answering system. • During a call: mute the microphone. • While the phone is ringing: ignore this call (mute the ringer).
* 🔑	<ul style="list-style-type: none"> • Press & hold to lock/unlock the keypad.
LED	What it means
STATUS	<ul style="list-style-type: none"> • On: the battery is charging. • Blinking: there are new messages.


Reading the Display

The table shows the possible status icons & what they mean. Since the icons appear based on what the phone is doing, you won't see all the icons at the same time.

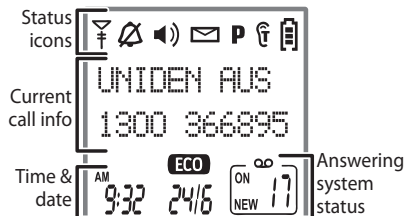


Icon	What it means
📶 🔒	The signal from the base is 1) strong or 2) weak.
🔕	The ringer is turned off and will not ring for new calls.
📢	The speakerphone is on.
✉️	You have a voice message waiting.
P	Privacy Mode is on: no other handset can join the call.
📶	T-coil mode is on (see p. 8).
🔋🔋🔋🔋	The battery is 1) full, 2) half charged, 3) getting low or 4) empty.
ECO	The handset is using ECO (power save) mode.
[Aa] [aA]	Enter 1) capital or 2) lower case letters (see p. 9).

Parts of the Base

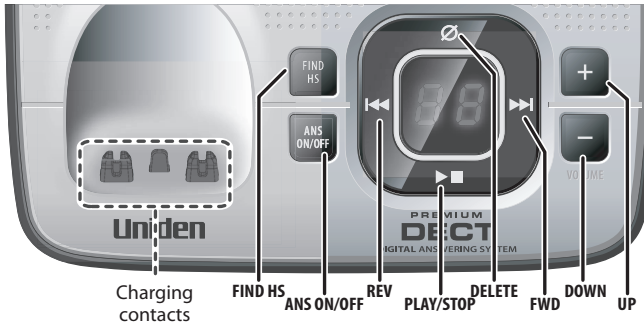

Key (icon)	What it does
FIND HS	<ul style="list-style-type: none"> • In standby: page all handsets.
ANS ON/OFF	<ul style="list-style-type: none"> • In standby: turn the answering system on or off.
REV (⏮)	<ul style="list-style-type: none"> • While playing a message: restart the message. • In the first 2 seconds of a message: play the previous message.
PLAY/STOP (▶■)	<ul style="list-style-type: none"> • In standby: start playing messages. • While playing a message: stop playing messages. • When the phone is ringing: ignore this call (mute the ringer).
DELETE (⊘)	<ul style="list-style-type: none"> • While playing a message: delete this message. • In standby: delete all messages.
FWD (⏭)	<ul style="list-style-type: none"> • While playing a message: skip to the next message.
DOWN (-)	<ul style="list-style-type: none"> • In standby: decrease the ringer volume. • While playing a message: decrease the speaker volume.
UP (+)	<ul style="list-style-type: none"> • In standby: increase the ringer volume. • While playing a message: increase the speaker volume.

Using the Handset Menu

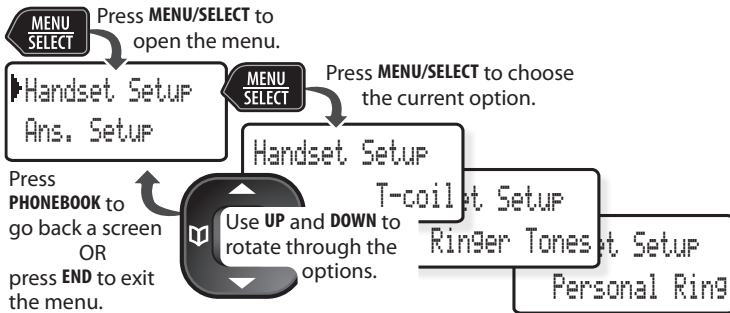

If you don't press any keys for about 30 seconds, the handset exits the menu. During a call, use **PHONEBOOK** to back out of the menu without hanging up.

Handset Setup Menu

You can change these settings separately for each handset.

<i>T-coil</i>	Turn on T-coil mode to reduce noise on hearing aids equipped with a telecoil (T-coil) feature. T-coil mode shortens talk time, so keep your battery fully charged.
<i>Ringer Tones</i>	Choose this handset's ring tone. As you highlight each ring tone, the phone plays a sample. When you hear the tone you want, press MENU/SELECT .
<i>Personal Ring</i>	Requires Caller ID service. Turn on personal ring so you can assign a special ring tone to people in your phonebook. If you have Caller ID service, this handset uses the assigned tone when the person calls.
<i>AutoTalk</i>	Have this handset answer a call when you pick it up from the cradle (without pressing any buttons).
<i>Any Key Answer</i>	Have this handset answer a call when you press any key on the 12-key dialpad.
<i>Banner</i>	Change the name used on the handset's display.
<i>Key Touch Tone</i>	Have the keypad sound a tone when you press a key.

Ans. Setup Menu

Refer to p. 16 for details on setting up your answering system.

Date & Time Menu

Use this menu to set the clock (if you have Caller ID, the phone sets date and time automatically). Enter the date and time (DD/MM/YY); select *AM* or *PM*. Use **CID** to move the cursor past a digit without changing it.

Global Setup Menu

The settings on this menu affect all handsets. Only one handset at a time can change these menu options.

<i>Insert 0</i>	This feature adds "0" or "00" at the beginning of the number received from Caller ID. The default setting for New Zealand is ON. The default setting for Australia is OFF.
<i>Set Line Mode</i>	Do not change this setting unless instructed to by customer service.
<i>VMWI Reset</i>	Reset the Voice Message Waiting Indicator (see p. 15).

Entering Text on Your Phone

- ◆ Use the 12-key dial pad anytime you want to enter text into your phone (a name in the phonebook, the handset banner, etc.).
- ◆ If two letters in a row use the same key, enter the first letter; wait for the cursor to move to the next space and enter the second letter.

To...	Press...
move the cursor left	PHONEBOOK.
move the cursor right	CID.
erase the character at the cursor	INTERCOM/CLEAR.
erase the entire entry	and hold INTERCOM/CLEAR.
enter a blank space	#.
switch between upper and lower case letters	*.
rotate through the punctuation and symbols	0.

USING YOUR PHONE

This section explains the most common functions on the phone.

To...	Using the earpiece	Using the speakerphone
make a call, dial the number &	press TALK/FLASH .	press SPEAKER .
answer a call	press TALK/FLASH .	press SPEAKER .
hang up	press END or put the handset in the cradle.	
ignore a call/mute the ringer	press MESSAGE/MUTE while the phone is ringing.	
switch to the speaker & back	press SPEAKER .	
mute the microphone during a call	press MESSAGE/MUTE (press again to turn the microphone back on).	
put a call on hold	press INTERCOM/CLEAR (after 5 minutes on hold, the call will be disconnected).	
return to a call on hold	press TALK/FLASH .	press SPEAKER .

Finding a Lost Handset

With the phone in standby, press **FIND HS** on the base. All handsets beep for 1 minute; to cancel, press **FIND HS** again or press any handset key.

Changing the Volume

To change the...	When...	Press...
earpiece or speaker volume for each handset	you are listening to that earpiece or speaker (playing messages, etc.)	UP to increase the volume. DOWN to decrease it.
base speaker volume		
ringer volume for each handset or the base (if you turn the ringer all the way down, that particular ringer turns off).	the phone is in standby	

Using the Caller ID and Redial Lists

You have to subscribe to Caller ID, Call Waiting, and Caller ID on Call Waiting services to use the features described in this section: contact your telephone provider for more information.

Caller ID list	Redial list
<ul style="list-style-type: none">• The phone saves the information for the last 50 received calls to the <i>CID list</i>. The <i>NEW</i> icon marks any calls received since the last time you checked the list.• All handsets share the same CID list so only one handset can access the list at a time.• In standby, handsets show how many calls came in since the last time you checked the CID list.	<ul style="list-style-type: none">• Each handset remembers the last 5 numbers you dialed on it.• Only one handset can access its redial list at a time.

To...	Press...
open the CID list	CID.
open the redial list	REDIAL/PAUSE.
scroll through the lists	DOWN to scroll from newest to oldest. UP to scroll from oldest to newest.
dial the highlighted number	TALK/FLASH or SPEAKER.
close the lists	PHONEBOOK.

For individual record options, highlight a number and press **MENU/SELECT**:

<i>Delete Entry</i>	Erase the number from the list.
<i>Store Into Pb</i>	Add the number to the phonebook. The handset prompts you to edit the name and number and select a personal ring.
<i>Delete All</i>	Erase all numbers from the list.

Using Call Waiting

◆ Call Waiting, a service available from your telephone provider, lets you receive calls while you are on another call. Caller ID on Call Waiting (CIDCW) service displays Caller ID information for a waiting call.

If you get a Call Waiting call, the phone sounds a tone and displays any CID information received from the waiting call.

For Australian Model: Press **TALK/FLASH** and then press **2** to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **TALK/FLASH** and then **2** again.

For New Zealand Model: Press **TALK/FLASH** to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **TALK/FLASH** again.

Using the Phonebook

The phone can store up to 100 entries in its phonebook. All handsets share the same phonebook, so only one handset can access it at a time.

To...	Press...
open/close the phonebook	PHONEBOOK.
scroll through the entries	DOWN to scroll through the entries from A to Z. UP to scroll from Z to A.
jump to entries that start with a certain letter	the number key corresponding to the letter you want.
dial the current entry	TALK/FLASH or SPEAKER.
edit the current entry	MENU/SELECT , then select <i>Edit</i> .
delete the current entry	MENU/SELECT , then select <i>Delete</i> . When the phone prompts you to confirm, select <i>Yes</i> .

Adding Phonebook Entries

With the phone in standby, open the phonebook. Press **MENU/SELECT** and select *Create New*. Enter a name & number and select a personal ring.

- ◆ Enter the phone number (up to 20 digits) exactly as you would dial it.
- ◆ If you need the phone to wait before sending the next set of digits, press **REDIAL/PAUSE** to insert a 2-second pause. You can insert multiple pauses, but each one counts as a digit (you'll see *P* in the display).

Deleting All the Phonebook Entries

With the phone in standby, open the phonebook. Press **MENU/SELECT** and select *Delete All*. When the phone prompts you to confirm, select *Yes*.

USING SPECIAL FEATURES

Silent Mode (DND - Do not Disturb)

You can silence the ringers on the base and all handsets for a specific period of time; the answering system answers any incoming calls without playing anything through the speaker.

1. With the phone in standby, press and hold **#/DND** on any handset. The phone prompts you to select the number of hours (*1 - 9* or *Always On*) that you want it to stay in silent mode.
 2. To confirm, press **#/DND** or just wait about 5 seconds. The phone turns on the answering system and displays *Silent Mode On* on each handset.
 3. After the selected number of hours, the phone automatically exits silent mode. To exit silent mode manually, press and hold **#/DND** again.
- ⊗ **If the phone is in silent mode and you turn off the answering system, the phone exits silent mode.**

Multihandset Features

⊗ **To use the features in this section, you need at least 2 handsets.**

- ◆ Your base supports a total of 6 cordless handsets: the one that came with the base and up to 5 DECT 3005 accessory handsets.
- ◆ You must register accessory handsets to the base before using them. (Handsets that came packaged with the base are already registered.)
- ◆ Handsets that aren't registered display a *Not Registered* message. For registration instructions, see p. 21, or see the accessory handset manual.

- ◆ If a handset was ever registered to a base, you must reset it before it can register to a new base; see p. 21, or see the accessory handset manual.

Conference Calling

- ◆ When an outside call comes in, two handsets can join in a conference call with the outside caller.
- ◆ To join a call that's already in progress, just press **TALK/FLASH** or **SPEAKER**.
- ◆ To leave the conference call, hang up normally; the other handset remains connected to the call.

Call Transfer

To...	Press...
transfer a call	INTERCOM/CLEAR . The phone puts the call on hold and prompts you to select the handset you want to page. When the other handset accepts the call, you'll be disconnected (press TALK/FLASH to rejoin the call).
cancel a transfer	TALK/FLASH to return to the call.
accept a transferred call	INTERCOM/CLEAR to answer the page and speak to the other handset. Then, press TALK/FLASH to speak to the caller.

Privacy Mode

To activate privacy mode on a call in progress, press **MENU/SELECT** twice. As long as privacy mode is on, you'll see a **P** in the display, and no other handsets can join your call. Privacy mode turns off automatically when you hang up; you can also turn it off by pressing **MENU/SELECT** twice.

Handset to Handset Intercom

- ◆ Whenever the phone is in standby, you can make an intercom call between handsets without using the phone line.
- ◆ You can make an intercom call from any handset, but only two handsets can be in an intercom call at any time.
- ◆ If an outside call comes in during an intercom page, the phone cancels the page so you can answer the incoming call.
- ◆ If an outside call comes in during an intercom call, press **TALK/FLASH** to hang up the intercom call and answer the outside call.

To...	Press...
make an intercom page	INTERCOM/CLEAR. Select the handset you want to talk with, or <i>All</i> to page all handsets at the same time.
cancel a page	END.
answer a page	INTERCOM/CLEAR or TALK/FLASH.
end an intercom call	END. Both handsets return to standby.

Chain Dialing

If you often have to enter a series of digits or a code number during a call, you can save that code number to a phonebook entry and use the phonebook to send the code number.

1. Enter the code number (up to 20 digits) into the phonebook just like a regular phonebook entry. Be sure to enter the code number into the phonebook exactly as you would enter it during a call.
2. When you hear the prompt that tells you to enter the number, open the phonebook and find the entry that contains your code number.
3. Press **MENU/SELECT** to send the code. If you change your mind, just close the phonebook.

Voice Message Notification

- ◆ If you subscribe to a voice mail service, your phone can notify you when you have a new message. This feature supports Frequency-Shift Keying (FSK) notification. Contact your voice mail provider for information.
- ◆ When you have new messages, the display shows a message icon. After you listen to your messages, the message icon turns off. If it doesn't, you can reset it: With the phone in standby, open the menu and select *Global Setup*; select *VMWI Reset*, then select *Yes*.

USING THE ANSWERING SYSTEM

Answering System Options (*Ans. Setup*)

You can set or change the answering system options from any handset. Just open the menu and select *Ans. Setup*. Select one of the following:

<i>Security Code</i>	Enter a 2-digit PIN so you can access your answering system from any touch-tone phone (see p. 18).
----------------------	--

<i>Ring Time</i>	Set the number of rings (6, 9 or 12) before the system answers. <i>Toll Saver</i> makes the system answer after 2 rings if you have new messages or after 4 rings if you don't.
<i>Record Time</i>	Set the amount of time (1 or 4 minutes) callers have to leave a message. Choose <i>Announce Only</i> if you don't want the system to let callers to leave a message.
<i>Message Alert</i>	Have the base beep every 15 seconds when you have a new message. The alert stops after you listen to all your new messages or if you press any key on the base.
<i>Call Screen</i>	Turn on the call screen feature so you can hear callers as they leave messages on the base speaker (see p. 18).
<i>Ans. On/off</i>	Turn your answering system on or off.
<i>Record Greeting</i>	Record an outgoing message or greeting (see below).
<i>Greeting Options</i>	Switch greetings or delete your greeting (see below).

Personalizing the Greeting


Your personal outgoing message or *greeting* can be from 2 to 30 seconds long. If you don't record a greeting, the system uses a pre-recorded greeting: *Hello, no one is available to take your call. Please leave a message after the tone.*

To...	Follow these steps:
Record a personal greeting	<ol style="list-style-type: none"> 1. Open the menu with the phone in standby. Select <i>Ans. Setup</i>, then <i>Record Greeting</i>. 2. Press MENU/SELECT to start recording. Wait until the system says "Record greeting" before speaking. 3. Press MENU/SELECT to stop recording. The system plays back your new greeting. 4. To keep the greeting, press END. To re-record it, press MENU/SELECT.
Switch between greetings	<ol style="list-style-type: none"> 1. Open the menu with the phone in standby. Select <i>Ans. Setup</i>, then <i>Greeting Options</i>. 2. The system plays back the current greeting. Press MENU/SELECT to switch greetings.
Delete your greeting	Switch to your personal greeting, then press INTERCOM/CLEAR .

Accessing the Answering System

When the phone's in standby, you can access the system from any handset:

- ◆ Only 1 handset can access the system at a time.
- ◆ If you do nothing for 30 seconds, the phone returns to standby.
- ◆ During remote access, the phone beeps so you know it's waiting for the next command.
- ◆ You can press the number key shown next to each command instead of scrolling through the screens.

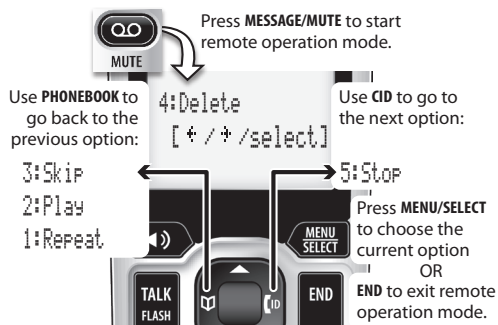

Getting Your Messages

To...	From the base	From a handset
play new messages	Press PLAY/STOP . The system announces the number of new & old messages, then plays each new message (followed by the day and time) in the order it was received.	Press MESSAGE/MUTE .
restart this message	Wait at least 5 seconds after the message starts playing, press REV .	select <i>1:Repeat</i> .
replay an earlier message	Within 2 seconds after a message starts playing, press REV .	select <i>1:Repeat</i> .
skip a message	Press FWD .	Select <i>3:Skip</i> .
delete a message	While a message is playing, press DELETE .	While a message is playing, select <i>4>Delete</i> .
delete all messages	With the phone in standby, press DELETE ; press DELETE again to confirm.	Not available.
play old messages	After the system plays all new messages, press PLAY/STOP again.	select <i>2:Play</i> .
stop playback	Press PLAY/STOP .	Select <i>5:Stop</i> .

Screening Your Calls

You can use the answering system for *call screening*. While the system takes a message, you can listen on the base speaker (if you turn on *Call Screen*) or from a handset. Only one handset can screen calls at a time. If another handset tries to screen calls, it beeps and returns to standby.

To...	From the base	From a handset
hear the caller leaving a message	Listen to the caller over the speaker.	Press MESSAGE/MUTE .
answer the call	NA	Press TALK/FLASH .
mute the call screen without answering (if you mute the call screen, the system continues taking the message: it just stops playing through the speaker).	Press PLAY/STOP .	Press END or return the handset to the cradle.

Using the System While You're Away from Home

You can dial in to your answering system from any touch-tone phone. Before you can use this feature, you must program a security code.

Programming a Security Code

With the phone in standby, open the menu; select *Ans. Setup*, then select *Security Code*. Use the number keypad to enter a two-digit security code (00 to 99). Press **MENU/SELECT** when you're finished.

🔔 **Remember to make a note of your new security code!**

Dialing In to Your System

1. Call your phone number & wait until the system answers. (If the system is turned off, it answers after 15 rings & sounds a series of beeps.)
2. During the greeting or beeps, press # and **immediately** enter your security code. If you enter it incorrectly 3 times, the system hangs up and returns to standby.
3. The system announces the time, the number of messages in memory, and a help prompt. It beeps to let you know it's waiting for a command.
4. When you hear beeping, enter a 2-digit command from the chart.

#1	Repeat message
#2	Play message
#3	Skip message
#4	Delete message
#5	Stop playback
#6	Turn the system on
#9	Turn the system off
#0	Hear help prompts

- ✎ **If you don't press any keys for 15 seconds, the system hangs up and return to standby.**

IMPORTANT INFORMATION

Solving Problems

If you have any trouble with your phone, check this section first. If you need help, visit the customer support page of our website listed on the front cover.

General problems	Possible solutions
No handsets can make or receive calls.	<ul style="list-style-type: none"> • Check the telephone cord connection. • Disconnect the base AC adapter for a few minutes; then reconnect it.
A handset can't make or receive calls.	<ul style="list-style-type: none"> • Move the handset closer to the base.
A handset can make calls, but it won't ring.	<ul style="list-style-type: none"> • Make sure the ringer is turned on. • Make sure Silent Mode is turned off (see p. 13).
A handset is not working.	<ul style="list-style-type: none"> • Charge the battery for 15-20 hours. • Check the battery connection.
The phone keeps ringing when I answer on an extension.	<ul style="list-style-type: none"> • You may have to change the line mode. Contact Customer Service for instructions.
Audio issues	Possible solutions
Callers sound weak or soft.	<ul style="list-style-type: none"> • Move the handset closer to the base. • Keep the handset's battery fully charged. • Increase the earpiece volume.
There's a lot of noise or static on the line	<ul style="list-style-type: none"> • Check for interference from appliances (microwave ovens, TVs, etc.) or wireless devices (baby monitors, WiFi equipment, etc.). Move the handset or base away from the interference source. • If you use a telecoil hearing aid, turn on T-coil mode (see p. 8). • If you have any service that uses the phone line, add a DSL or telephone line filter (see p. 21).

Caller ID problems	Possible solutions
No handsets display Caller ID information.	<ul style="list-style-type: none"> • Let calls ring twice before answering. • Make sure your Caller ID service is active.
Caller ID displays briefly and then clears.	<ul style="list-style-type: none"> • You may have to change the line mode. Visit the customer support page on the website for more information.

Multi-handset problems	Possible solutions
I can't transfer calls.	<ul style="list-style-type: none"> • Reset the handset (see p. 21).
Two handsets can't talk to a caller.	<ul style="list-style-type: none"> • See if any handset is in Privacy Mode.
A handset says <i>Unavailable</i> .	<ul style="list-style-type: none"> • Move the handset closer to the base. • See if any handset is in Privacy Mode.
I can't register a new handset.	<ul style="list-style-type: none"> • Reset the handset (see p. 21). • See if you have 12 registered handsets.

Answering system problems	Possible solutions
The answering system does not work.	<ul style="list-style-type: none"> • Make sure the answering system is on. • Make sure the base is plugged in.
The system won't record messages.	<ul style="list-style-type: none"> • See if <i>Record Time</i> is set to <i>Announce Only</i>. • Delete messages (memory may be full).
A handset can't access the answering system.	<ul style="list-style-type: none"> • See if another handset is using the system. • Make sure the phone is in standby.
My outgoing message is gone.	<ul style="list-style-type: none"> • If there was a power failure, re-record your personal outgoing message.
I can't hear the base speaker.	<ul style="list-style-type: none"> • Make sure call screening is turned on. • Change the base speaker volume.
Messages are incomplete.	<ul style="list-style-type: none"> • Increase the <i>Record Time</i>. • Delete messages (memory may be full).
The system keeps recording when I answer on an extension.	<ul style="list-style-type: none"> • You may have to change the line mode. Contact Customer Service for instructions.

Installing a Line Filter or DSL Filter

A telephone line filter or DSL filter prevents services that use the phone line from causing interference on your phone. To get a line filter, contact your service provider or look in an electronics store.

Plug the filter into the telephone wall jack and plug the base into the filter. Make a test call to make sure the noise is gone.

Liquid Damage

CAUTION: If the base is covered in liquid, disconnect the adapter & phone cord from the wall before touching it.

If the liquid is only on the exterior housing of the base or handset, wipe it off and use as normal. If you can hear liquid inside the housing:

1. Remove all compartment covers, and disconnect all cables and cords.
2. If liquid is leaking from any vent or hole, turn the phone so that vent faces down. If not, place the largest vent face down.
3. Let dry for at least 3 days. Check for liquid inside the phone before replacing compartment covers & reconnecting cords.

Resetting Handsets

If you have trouble with a handset or if you want to replace one, clear the registration information from the base and the handset:

1. Press & hold **END** and **#** at the same time until you see the *System Reset* menu.
2. If you still have the base the handset is registered to, select *Deregister HS*, then select the handset you want to reset. If you don't have that base anymore, select *Base Unavailable*.
3. To confirm, select *Yes*. The handset displays *Handset not registered*.

Registering Handsets

If you see a "not registered" message on a handset, you must register it to a base before using it.

1. Place the handset in the base; the display should say *Handset Registering*.
2. Wait until the display says *Registration Complete* (about 30 seconds), then pick up the handset and press **TALK/FLASH**.
3. If you don't hear a dial tone or the display says *Registration Failed*, charge the battery completely, then try again.

Adapter and Battery Information

AC adapter	Base	Charger
Part number	AAD-041S(M)	AAD-600S(M)
Input voltage	240V AC, 50 Hz	240V AC, 50 Hz
Output voltage	9V DC @ 350mA	9V DC @ 210mA

- Use only the supplied AC adapters.
- Use the proper adapter for the base & any chargers.
- Do not place the unit in direct sunlight or subject it to high temperatures.

Battery pack (with normal use)	
Part number	BT-694 or Bt-694s
Capacity	650mAh (BT-694) or 500mAh(BT-694s)
Talk time	about 10 hours
Standby time	about 7 days
Battery life	about 1 year

- Replace the battery when the talk or standby time becomes noticeably reduced. For replacements, visit the online shop on our website (see the front cover).
- When the battery gets low, the handset beeps and shows a low battery alert; put the handset in the cradle for recharging.


Rechargeable Battery Warning

- This equipment contains a rechargeable Nickel-Metal-Hydride (Ni-MH) battery.
- Do not short-circuit the battery.
- The batteries in this equipment may explode if disposed of in a fire.
- Do not charge the batteries in any charger other than the one specified in the owner's manual. Using another charger may damage the battery or cause it to explode.



Uniden works to reduce lead content in our products & accessories.

Wall Mounting the Base


This phone can be mounted on any standard telephone wall plate using an optional wall-mount bracket. You can purchase a wall-mount bracket by the online shop at www.uniden.com for Australian models and www.uniden.co.nz for New Zealand models.

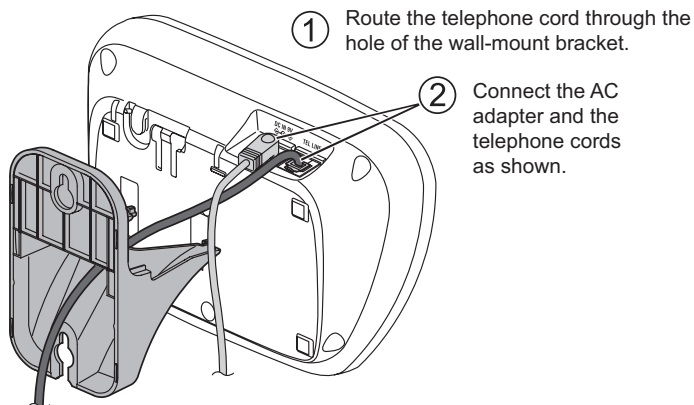

- 3 Line up the four tabs on the wall-mount bracket (two at the top and two at the center) with the four notches on the bottom of the base. Slide the bracket into place.

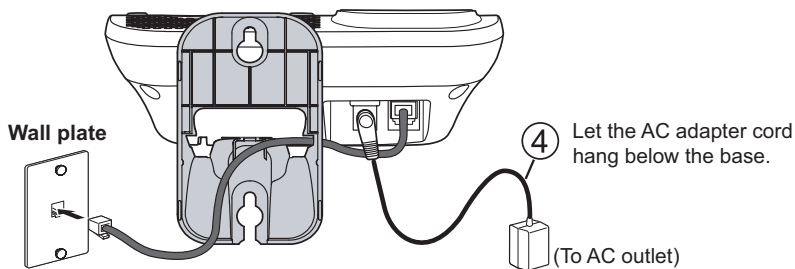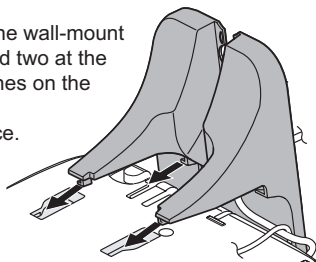


- ⑥ Place the mounting slots over the pins on the wall plate.

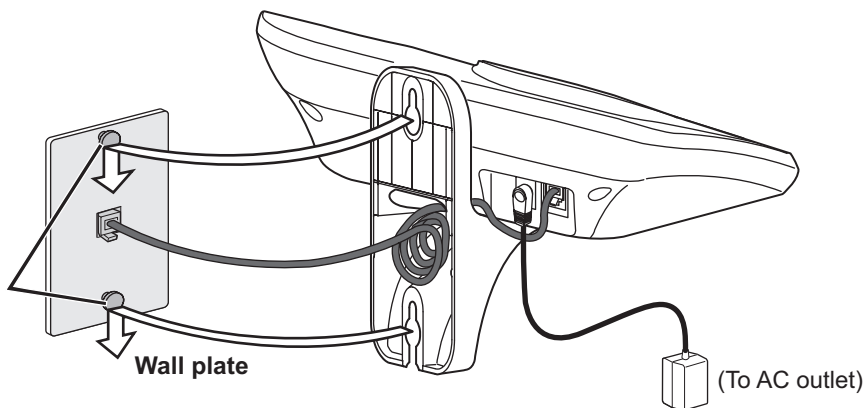

- ⑦ Slide the base down to lock it into place.

Removing the wall-mount bracket

At the bottom of the base, pinch the two "nose" of the wall-mount bracket as shown, and then slide the bracket away from the base.

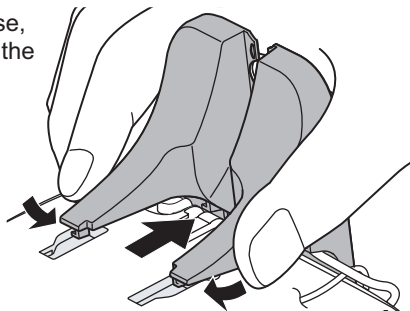

Note: Mounting the phone directly on the wall

- Be sure the wall is capable of supporting the weight of the phone, and use the proper type of anchoring device for the wall material.
- Insert two #10 screws (minimum length of 35mm , not supplied) into the wall, 100mm apart.
- Leave the screw heads 3mm away from the wall to allow room for mounting the phone.
- Align the mounting slots over the screws and slide the base down into place as shown above.

ONE-YEAR LIMITED WARRANTY

UNIDEN DECT 3035

This product comes with a one year limited warranty. Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

IMPORTANT Evidence of the original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited ABN 58 001 865 498
Uniden New Zealand Limited

Elements of Warranty: Uniden warrants to the original retail owner for the duration of this warranty its **DECT 3035** (hereinafter referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

Warranty Duration: This warranty to the original retail owner only is only valid in the original country of purchase and shall be of no further effect 1 year after the date of original retail sale. This warranty will be deemed invalid if the Product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden. (F) Only available in the original country of sale.

Parts Covered: This warranty covers for one (1) year, the Product and included accessories.

Statement of Remedy: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the Product and return it to you without charge for parts and service. This warranty does not provide for reimbursement or payment of incidental or consequential damages. This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

Procedure for obtaining performance or warranty: in the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

UNIDEN AUSTRALIA PTY LTD

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki,
Manukau 2013
Fax (09) 274 4253
www.uniden.co.nz

Uniden®

© 2010 Uniden Australia Pty Ltd/Uniden New Zealand Limited
Printed in Vietnam UNZZ01234BZ(0)